



User Guide

go.com.mt/connect



How to set up



[Insert SIM here]



- 1.** Remove the watch from the box and write down its 10-digit ID number found on the underside of the box.
- 2.** Put the SIM card in the watch, as shown.
- 3.** Charge the watch with the USB power supply cable provided.
- 4.** Press and hold the Power button, until a welcome message appears.
- 5.** Install the MyKi watch app for Android or iOS by scanning the QR code on the box or go to <https://my.myki.watch>

Using the app features

How to create an account?

Open the app or the web page <https://my.myki.watch> select the preferred language, go to create your account and accept/decline the terms and conditions.

- Enter the username.
- Enter the password (should contain six or more characters).
- Confirm the password.
- Enter your mobile number.
- Enter your email address
- Enter the 10-digit ID of the watch found on the bottom of the box “ID number” or from menu Settings > Info. Press “Send security code to watch” and the watch will receive a 4 character PIN code.
- Enter the received PIN code.
- Enter a nickname to the watch.
- Enter the watch’s SIM card phone number.
- Press “Sign up”
- You will then get a notification to allow the watch to access your location while using the app and another to receive notifications

The watch

Home Screen


Press the SOS button found on the right side of the watch, so that the watch wakes up. On the first screen you will see indications about time, mobile reception signal strength, battery status and ringing mode. If there are inbox messages you will see an icon on the right side of the screen.



How to set up the Mum & Dad numbers

After you have successfully created your account, now it is time to set up Mum and Dad.

- 1.** Press the settings icons found on the top right of the screen.
- 2.** Click SOS and Family Numbers.
- 3.** Enter the Mobile number as follows 00356XXXXXXXX. Important! 00356 is necessary so that GO Connect Kids works even while roaming.

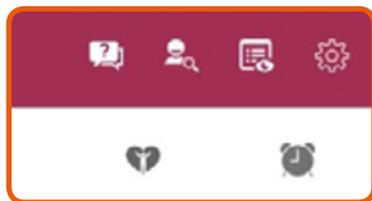

The watch

How to Call Mum or Dad

1. Touch the “Mum” icon and then touch the watch to call the first number entered into SOS and family numbers section in Settings menu.



2. Touch the “Dad” icon and then touch the watch to call the second number entered into SOS and family numbers section in Settings menu.



How to answer a call

To answer the call, touch the display



The watch

Inbox Message

The envelope icon shows that a text message was received, while the Loud speaker icon stands for Voice message. In case you have received both text and voice messages, the voice message is treated with priority and the Loud speaker icon will appear.



SOS Button

Pressing the SOS display area initiates immediately a call to the first number entered. If no connection is established, the watch will continue dialling the next SOS numbers until connection is established. It also sends a notification to the mobile application.

The SOS Button also serves as a back button when clicked once.



The watch

Rewards and Pedometer

By touching the heart, you can see the number of received awards.

By touching the feet you can see the number of steps.



Phone Book Screen

You need to enter the phone numbers which can be dialled from the watch in the Settings menu of the mobile application. In case no numbers are entered, the phonebook will appear in grey.



Phone Book



Empty
Phone Book



Recorded
number in the
phonebook



Active call


The watch

Voice Messages Screen

Touch to play the received voice message

Touch and hold the button on the screen in order to record a message. When a time counter appears on the screen, you know that watch has started the recording.

Release the button when you are ready with the message and it will be sent automatically to the app. An indication that a new voice message was received will be received in the app.

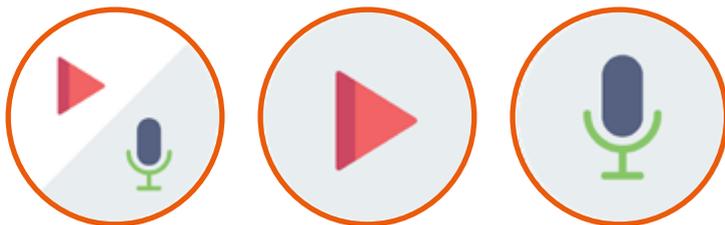

The watch



Settings Screen

In settings you can: 1) manage the ringing mode and 2) see information about the device



Choose this menu in order to set the ringing sound strength or to switch to Silent mode

Information about the device. Here you can find information about the IMEI / ID and the firmware version of the device.

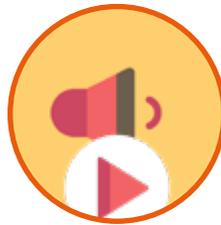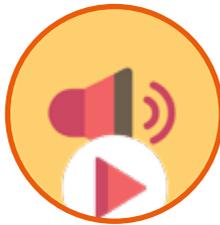

The GO Connect Kids App

What am I seeing in the main screen?

The Location Section shows the location of the Kid on the map, positioned via GPS or carrier cells and may show your location, if available.

GPRS Signal - shows the strength of the mobile network coverage.


Battery - shows how much battery power the watch currently has.

GPS Satellites - shows availability and number of satellites used to define the present location of the watch.

Speed - shows if your kid is moving and how fast is the movement.

This button (green) calls the watch.

This button (orange) sends request to the watch to call you or any other number, entered by you.

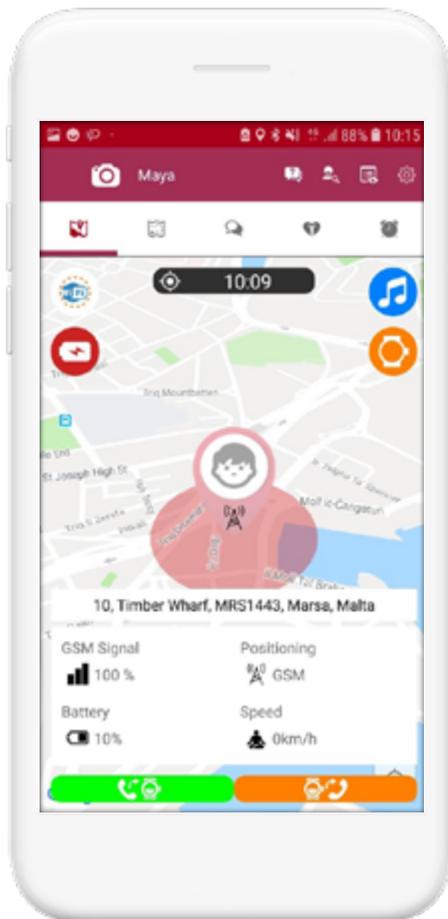

Using the app features

Location History



Indicates the particular locations registered today, or in the past 30 days, with timestamps.



Indicates each registered location. If pressed, turns red and groups close locations into a single location.



Playback of locations history. If pressed it doubles  and triples  the playback speed. If pressed one more time, playback returns to normal speed.

Safe zone - you can set two Safe zones. When you switch on for the first time a Safe zone, you will see a map with a perimeter. Move the map under the circle to define the desired area. You can change (increase or decrease) the radius of the Safe zone. Clicking on “Next” will lead to menu to configure the Active Time for this Safe Zone – “From”-“To” timeframe, when your kid is in this area. After pressing “Done”, the first Safe zone will be stored in the app. You may activate or deactivate the respective Safe zone with a switch. If the kid leaves this area, while the Safe zone is active and within the specified time period, you will receive a notification.

Speed limit - this feature helps you to track movement speed of your kid. Assign a “Speed limit” which you do not expect to be exceeded. If riding in a car, set the speed higher. If your kid is in a car or other vehicle that goes over that Speed limit, and the Speed limit is active, you’ll be notified.

SMS Alerts - In this menu you can define rules along which the watch shall send SMS notifications to the first phone number defined in “SOS and Family numbers”, in addition to the application’s notifications. You can set on and off SMS Alerts whenever SOS button is pressed and when the battery level drops. These SMS Alerts may incur additional costs.

Using the app features

Email Alerts - In this menu you can activate and deactivate the different types of notifications to be sent as email messages to the email address registered in your app.

Whitelist - Add up to 10 phone numbers permitted to call the watch. Numbers can be added and deleted at any time in the app.


Phonebook - Add up to 18 phone numbers which can be called from the watch. Numbers can be added, modified and deleted at any time. The numbers in the Phonebook can call the watch too (no need to duplicate them in the Whitelist)

Chat screen

Chat section and click in the field at the bottom left. You can write a message of up to 20 characters, but you can send unlimited number of messages by pressing the “Send” or “Enter” key on your software keyboard (bottom-right).

Hold the microphone icon, to start recording your voice message. Do not release the button until you have finished recording your message. When you release this button, the message will be sent to your kid’s watch.

In the same sections you can receive messages from the watch.

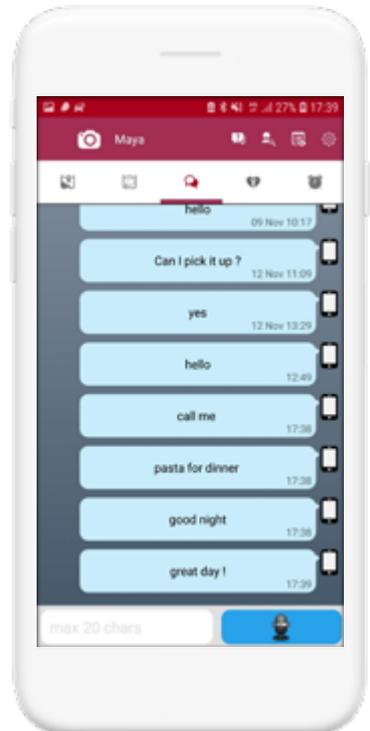

Using the app features

Kid Activity

In this section you may enter your kid's Height, Weight, Gender, Date of birth, etc. When your kid is wearing the watch, it detects steps and activity level. Within the parameter settings, the watch app detects if your kid is active enough or needs more activity. At the top of the screen is a calendar of activity. This is the daily record monitored by the watch which includes number of steps made, distance walked and calories burnt.


In the same Section there is a "Sleep moves" monitoring part with Settings, Sleep moves counted and daily record of Sleep moves.

How to send your kid a reward? - In the Activity Section, at the bottom of the screen (if "Today" is selected on the top) you'll see a little red heart.

To the left of the Heart there is minus sign, and plus on the right. You can send your kid reward hearts at any time. When you press the plus sign, you send a heart, which your kid will receive on the watch. To the left of the Heart there is a minus sign and a plus on the right. You can send your kid heart rewards at any time upon pressing the plus sign. If you feel your kid has misbehaved, you can take away the hearts by pressing the minus sign. Your kid will receive the rewards or have them taken away in real time. The kid will receive rewards in real time.



Alarms Section - The Alarms Section (rightmost position), you can set up to three alarms to wake your kid or to notify for different activities during the day. With each alarm, you can set the weekdays in which it is active and the time in which to activate the alarm.

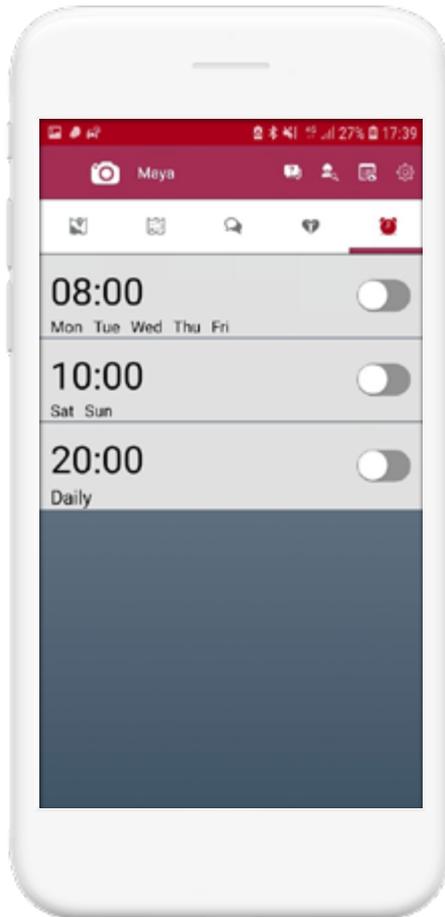

Using the app features

What's in the Settings Menu?

Select Language - In this menu, you can see, select or change your preferred language for the app.

Watch Language - The watch may be set to one of the following languages: English EN, Bulgarian BG, Portuguese PT, Spanish ES, Deutsch DE, Turkish TR, Russian RU, and French FR.

Account Settings - Here you find your account's details. You can make any changes from here.

If you have more than one kid, you can add a second watch in this menu and monitor both watches within the same app account.

From the same menu you can also remove the watch from your account and delete the account.

Push Notifications - In this menu you can activate and deactivate the different types of notifications to be sent to the watch mobile application on your smartphone.