



GO Remote

# User Guide



Follow us



[go.com.mt](http://go.com.mt)



# 1. Your Remote Control



## 2. Remote Control Functions



### Power

Turn a selected device on or off



### Source

Change TV input



### Number Pad

Enter a channel number or PIN

### Menu

Display the menu bar

### Exit

Close any screen and return to TV



### Volume Controls

Adjust the volume up and down



### Mute

Switch audio on or off



### EPG

Display the Electronic Program Guide (EPG)



P

### Channel Controls

Move up and down by channel and/or by page



### Arrow Keys

Scroll Up, Down, Left or Right

### OK

Select your preference

## 2. Remote Control Functions



### Back

Return to previous page or clear text when typing



### Help

Displays any available STB message



### Info

Display the info bar



### Aspect Ratio

Switch between different display modes



### Teletext

Access teletext on available channels



### Subtitle

Display any available subtitles



### Control Keys

Rewind, Play, Fast Forward, Stop, Pause & Record



### Quick Buttons

Red: Video On Demand, Green: Record,  
Yellow: Catch Up, Blue: Widgets



### Replay

Pause and rewinds current program  
(only on Interactive TV)



### Language Select

Choose between dual-language/commentary



### Skip

Go through EPG upcoming programs




### Sleep Timer

Set the timer when the STB automatically  
goes into standby mode

# 3. Interactive TV Features


## Restart

Press  and select Restart TV.

To return to Live TV press .

## Catch Up


Press .

Search by Show, Date or Channel name and press  for your preference.

To return to Live TV press  and press .


## Pause Live TV (PLT)


Press .

Press  to resume viewing TV.

To return to Live TV press  and press .

## Rewind & Fast Forward

Rewind Live TV up to the start of the program by pressing .




You can also use the  to move ahead.

To resume viewing, press .

To return to Live TV press .

## Record Live TV & Upcoming Programs



Record the program you are currently watching by pressing .

To record upcoming programs / series press  and press  or press  and select Record Program.

The record icon will appear next to the program listing.

You can also record more than one program simultaneously.

To stop recording press  and select 'Yes'.


Press  and use the Arrow Keys to choose program then press .



Select 'Play Recording' from the menu.

## Widgets

These are to be activated by the technician on first use.

Activation is done by pressing  and accepting the pop-up screens.

Press  again and select the widget e.g. news, weather, finance from the bottom menu.

Press  to return to widgets and press  again to return to Live TV.

# 4. Getting Started

## Viewing the Channels

Press **EPG** to view the channel lists.

Press **EPG** again to sort channels (available on Interactive TV only);

ALL: entire channel line up  
SUBSCRIBED: channels you are subscribed to  
SD: Standard Definition channels  
HD: High Definition channels

Use Arrow Keys to choose the channel.

Press **OK** to watch your chosen channel.

Press **EXIT** to close the EPG.

