




Samsung TV

**Auto tuning**

**Step 1:** Go to **Menu > Channel > Auto Tuning > Digital Channel Tuning.**

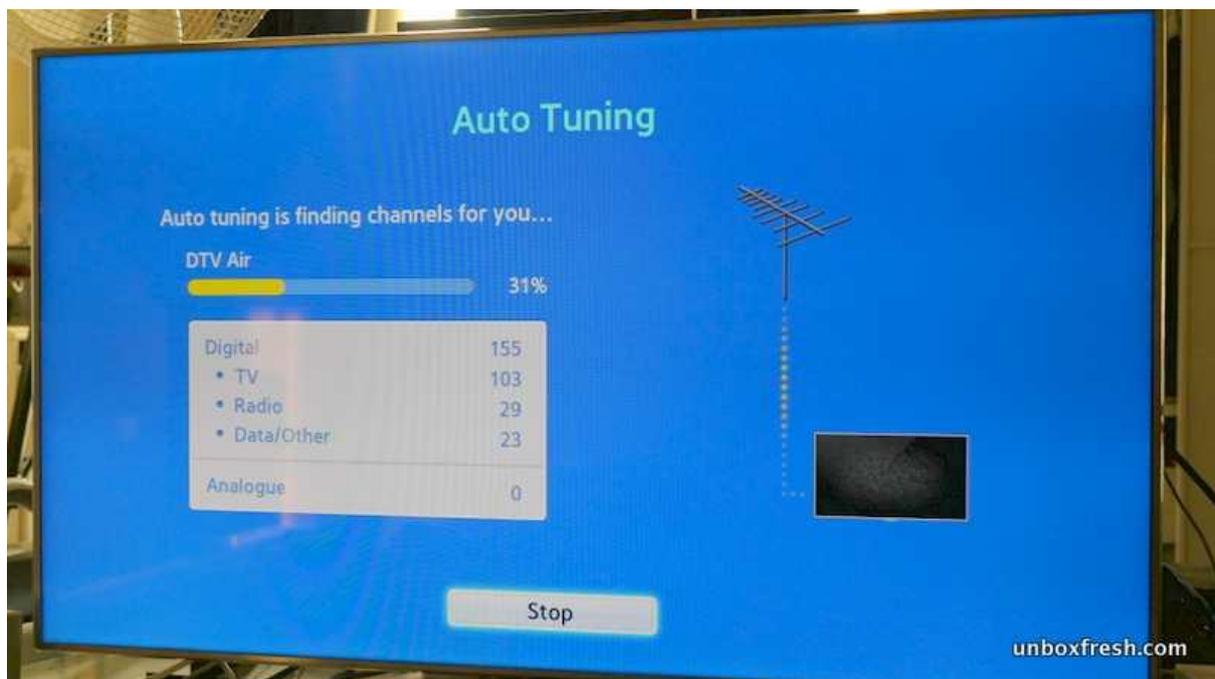

**Step 2:** Press **Enter** on the remote control for the tuning to begin.

**Step 3:** Once completed, it will automatically exit the Menu screen.

For **Manual Tuning**, follow these steps:

**Step 1:** Go to **Menu > Channel > Manual Tuning > Digital Channel Tuning.** The list of currently tuned channels will appear.

**Step 2:** Select **New** to tune in a new channel. The **New Channel** window will appear.

**Step 3:** Select whether to enter the **Channel** or **Frequency**.


**Step 4:** After typing the desired channel or frequency, select **Search** and press **Enter** on the remote control.

**Step 5:** Once the channel is located select **Save/Store** and press **Enter** on the remote control to confirm.

# PHILIPS

Follow the instructions below to program the TV:

1. Press the 'MENU' button on the remote control to access the main menu.
2. Press the cursor down to select INSTALLATION and press the cursor right.
3. Press the cursor down to select CHANNELS in the Installation menu and press the cursor right to access the Channels menu.
4. Select AUTOPROGRAM in the Channels menu and press the cursor right to START NOW.  
**Note:** If any of the channels are locked, the screen will prompt you to enter your PIN code in order to access the Installation menu.
5. Press the OK button.
6. Select Cable or Antenna in the Installation mode.
  - When Antenna is selected, the TV will detect antenna signals and will search for antenna TV (NTSC and ATSC) channels available in your local area.
  - When Cable is selected, the TV will detect cable company supplied signals and will search for cable TV (NTSC, ATSC, QAM modulated) channels available in your area.
7. Press the green button (START) to start auto programming.
8. The menu screen disappears and the progress of auto programming is displayed. The progress bar indicates the number of analog and digital TV channels found.
- 9.

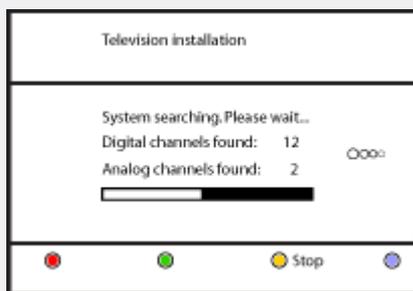

# TOSHIBA

## How To: TV Auto Program

The following article will take you through the procedure to perform a channel scan on your TOSHIBA television to store channels from a cable TV or TV antenna signal.

Prior to performing a **successful** channel scan:

- Your TV must be connected to a working cable TV service or TV antenna through the coax connector.
- The TV must not be connected to a cable box through the coax connection unless the connection is a pass-through type at the box.
- You must select the corresponding source on the TV to scan for channels from (Antenna or Cable).

---


After the channel auto program / scan has been performed, you can change channels on the TV by pressing the **channel up/down** button on the remote control.

### AUTO PROGRAM / SCAN / TUNING

**NOTE:** The steps to perform this procedure may be different depending on your TV model, even if the menu looks similar. **ALWAYS** refer to the User's Guide available at [support.toshiba.com](http://support.toshiba.com) for the specific TV for complete information.

### OPTION 1

The Option 1 procedure is for TVs with menus similar to the one shown below.

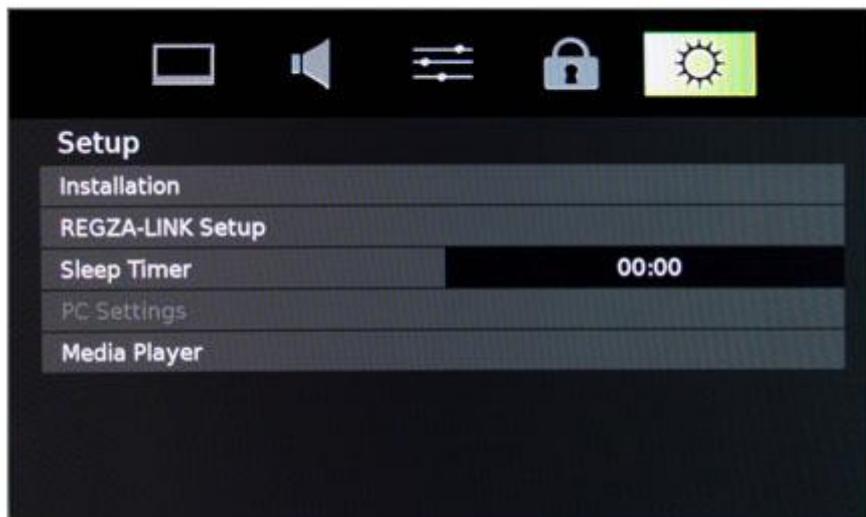


1. Press the **INPUT** button on the remote control repeatedly until **ANT/CABLE** is selected.
2. Press the **MENU** button on the remote control.
3. Using the Arrow buttons, select the icon in the top menu associated with **SETUP**, this is the icon furthest on the Right that looks like a gear.
4. Use the arrow buttons to select and highlight **INSTALLATION** and press **ENTER**.
5. Select the icon in the top menu associated with **TERRESTRIAL**, this is the icon furthest on the Left that looks like an antenna.
6. Select and highlight **INPUT CONFIGURATION** and press **ENTER**.
7. Using the left/right arrow buttons, select **Antenna** or **Cable** as desired, then select **DONE**.
8. Press the **CH RTN** button to go back to the **TERRESTRIAL** menu.
9. Select **CHANNEL PROGRAM** and press **ENTER**.
10. Select **START SCAN** to begin the **Channel Program**. Progress will be shown on the screen.  
Once complete the TV will display the lowest scanned and identified channel.

## OPTION 2

The Option 2 procedure is for TVs with menus similar to the one shown below.



1. Press the **INPUT** button on the remote control repeatedly until **ANT/CABLE** is selected.
2. Press the **MENU** button on the remote control.
3. Using the Arrow buttons, select **SETTINGS**.
4. Use the arrow buttons to select **SETUP** from the upper items and press **ENTER**.
5. Select **ANT/CABLE**.
6. Using the left/right arrow buttons, select **Antenna** or **Cable** as desired.
7. Next select **AUTO TUNING** and press **ENTER**.
8. Select **START SCAN** to begin the **Auto Tuning**. Progress will be shown on the screen.  
Once complete the TV will display the lowest scanned and identified channel.

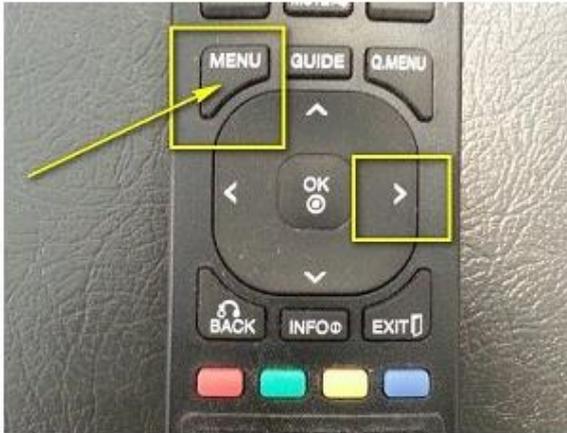


Press **Menu** Button on the remote.

**Note:** Button not always in the same location as shown.



Select **Setup**

Push **OK** on the remote

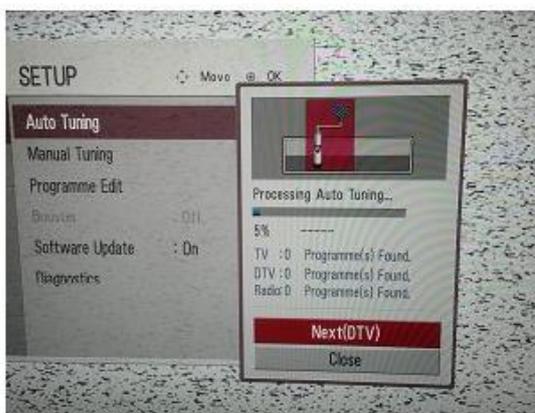


Wait until tuning is complete

Then press **Return** on the remote



Select Auto Tuning  
Push **OK** on the remote

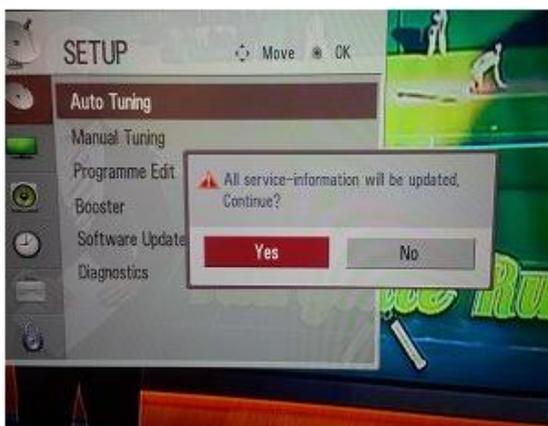


Select **Yes**  
Press **OK** on the remote control

Method 2;

1. Press Menu
2. Press Channel




3. Auto-Tuning
4. Start

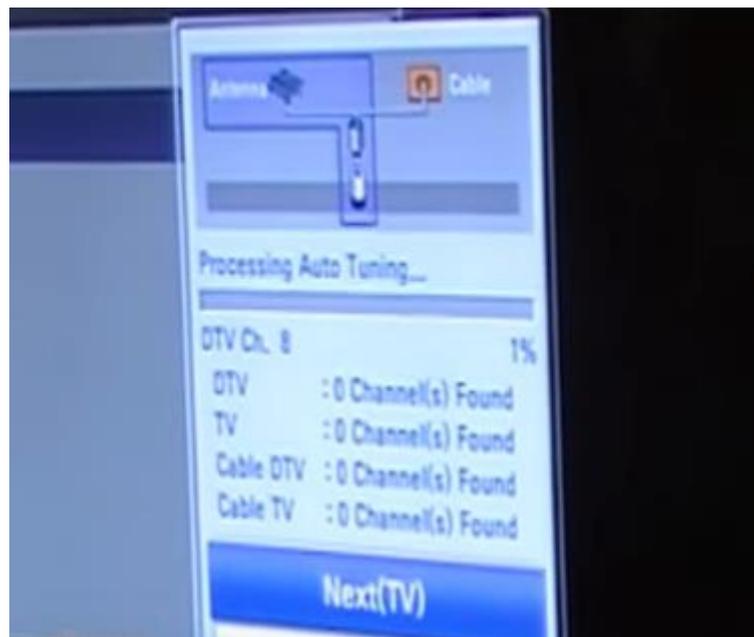

5. Next

# Panasonic


1. Press Menu

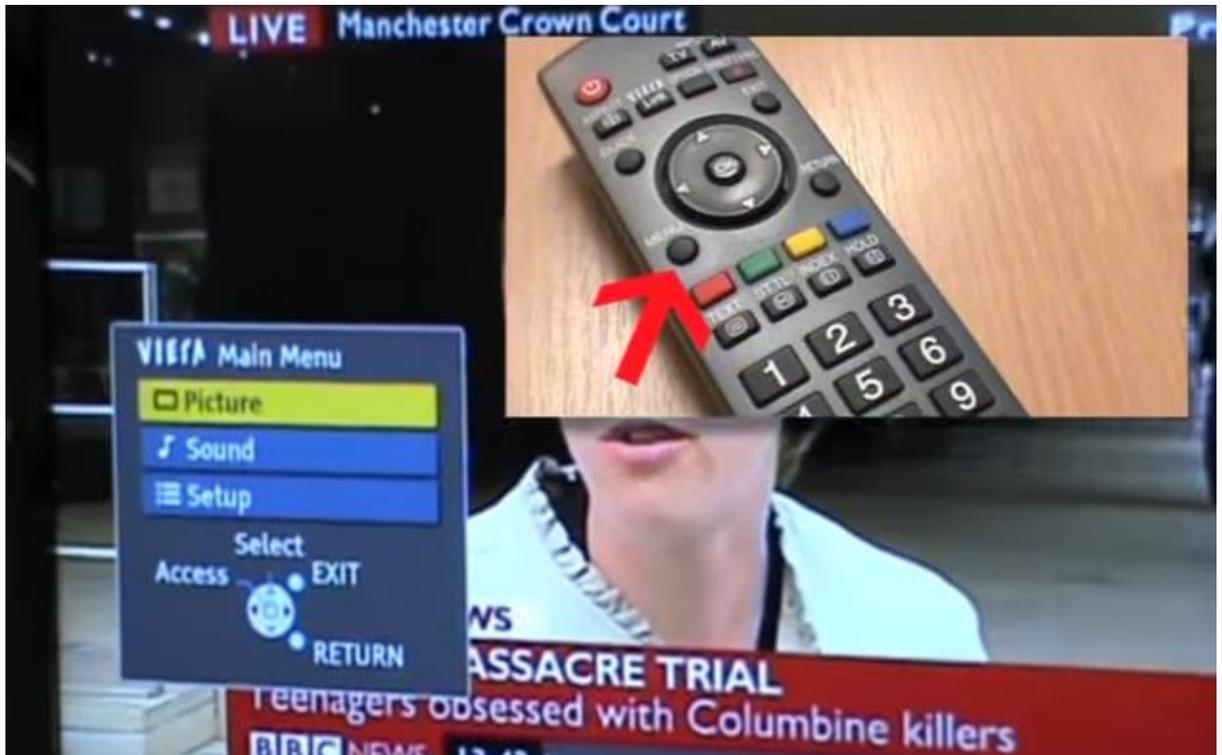


2. Set UP




3. DVB Tunning Menu

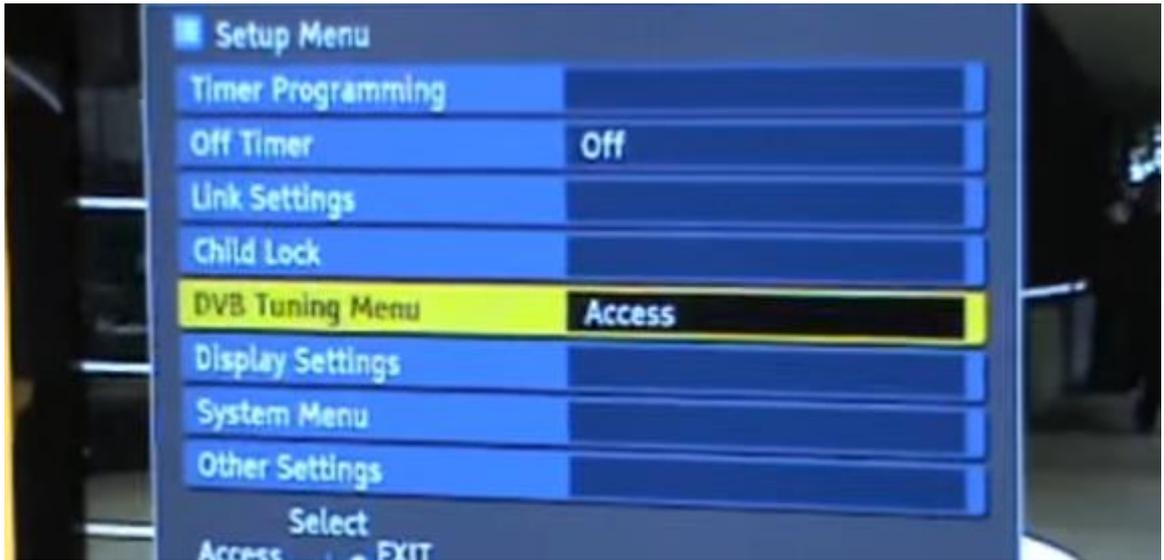

4. Auto Set UP

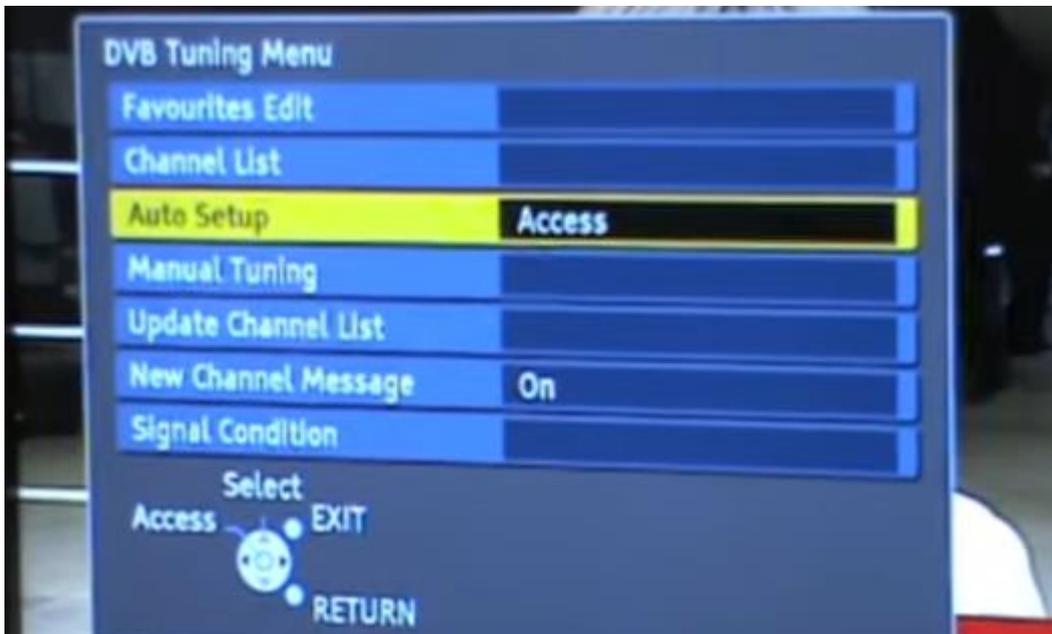

- 5. Re-tuning will take approx. 3 minutes

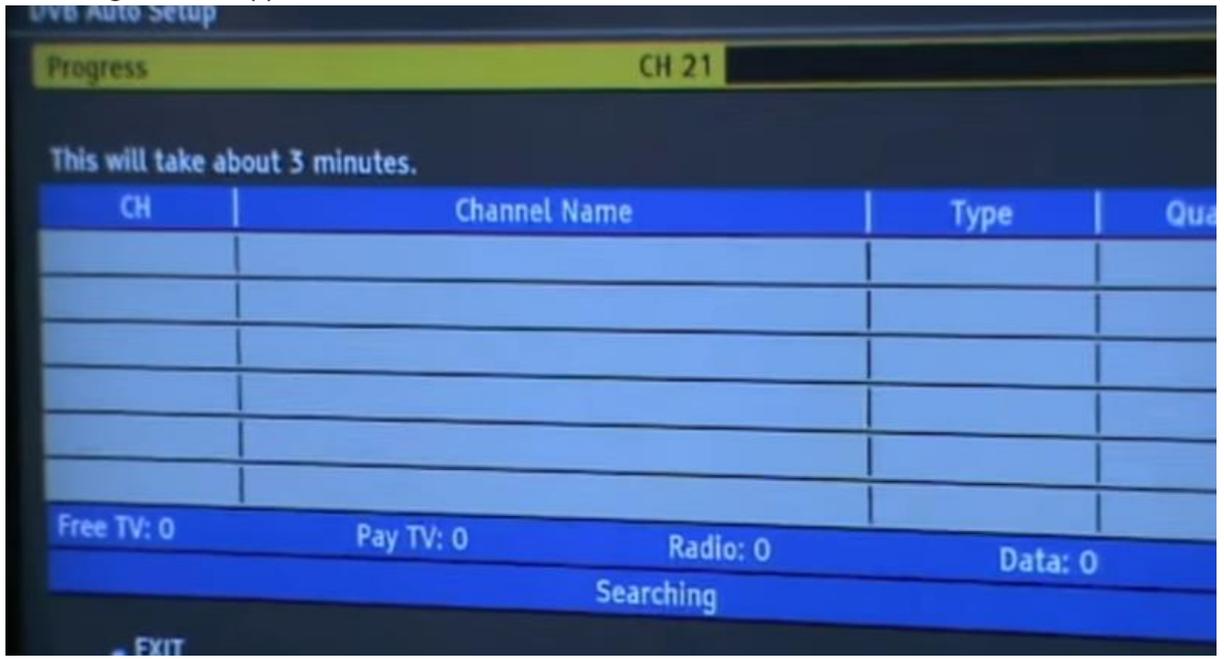

# SHARP

## Step 1

Press the "Menu" button on the remote control to bring up the main menu.

## Step 2

Scroll to "Initial Setup" using the left and right directional buttons.

## Step 3

Highlight "Broadcasting Setup" using the up and down arrow buttons, and press "Enter."




#### Step 4

Select "CH Search" and press "Enter." The next screen depends on whether your TV is connected to cable or an antenna.



#### Step 5

Choose "Start" if your TV is connected to an antenna.

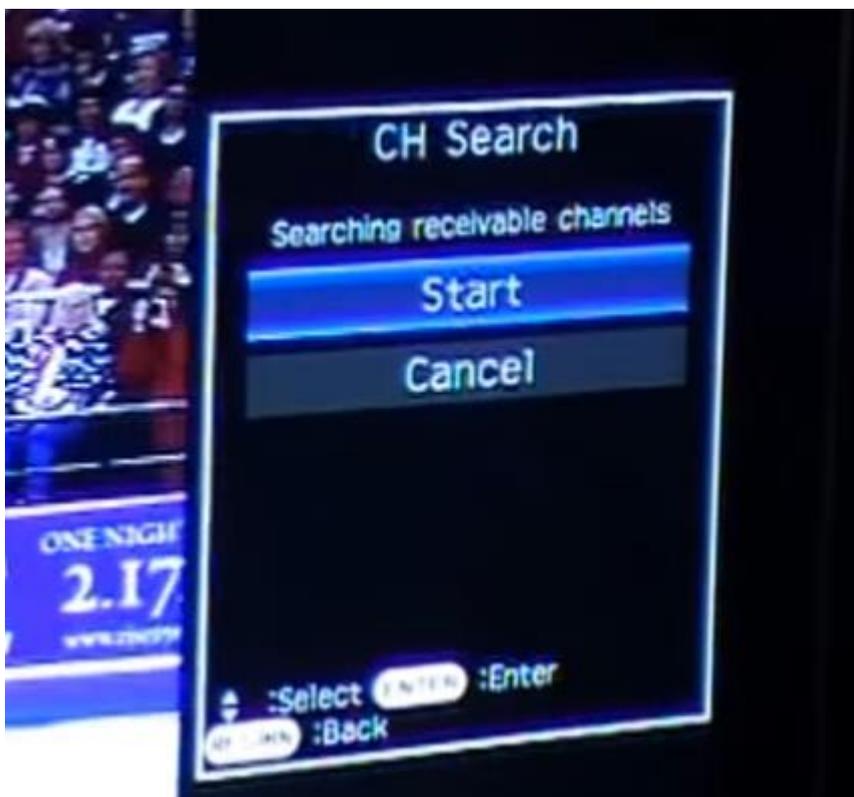


## Step 6

Select "Analog and Digital Search Start" if you are connected to cable with analog and digital stations. Choose "Analog Search Start" if your cable connection is analog only. Once the channel scan is finished, the television will ask if you want to block scrambled channels. Select "Yes" or "No," and press "Enter."

## SONY BRAVIA

### 1. Press HOME or MENU

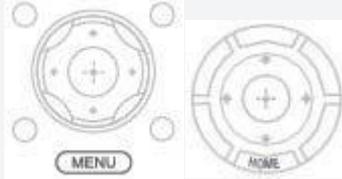

### 2. Select Settings

3. If your TV screen shows a Digital set-up option, select it and go straight to step 8. If not, go to step 5

4. Select System settings or Set up

5. Select Channel set up, if shown

6. Select Digital set up

7. Select Digital Auto tuning On some models, you will need to highlight the wrench icon first

8. The screen should say 'Do you want to start Auto Tuning?' Confirm this

9. Select Cable

10. On some models, you will need to enter the Scan type, Frequency or Network ID.

These are usually:


- Scan type: Quick scan (try Full scan if this doesn't work. It may take an hour or more to tune your TV on Full scan.)
- Frequency: Auto
- Network ID: Auto
- Operator: select the name of your operator

If you have problems with this step, please check with your operator as they may use different settings.


11. Select Start


# Insignia 10-0499

**Press the menu button and choose 'cable'**

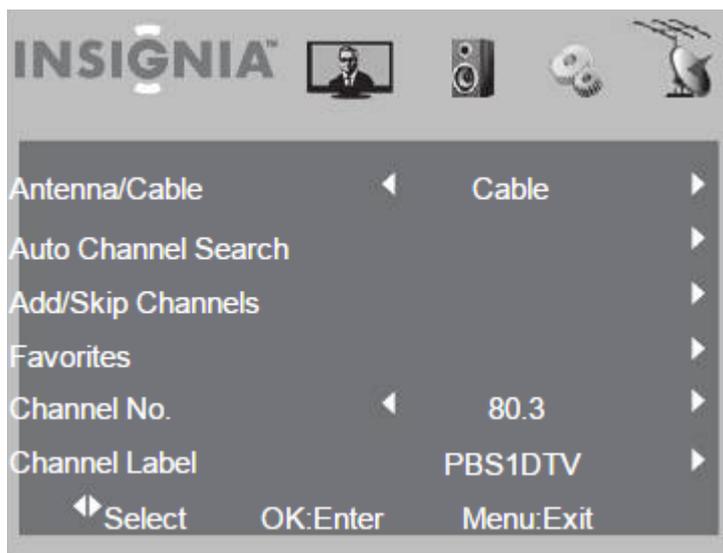

**Select auto channel search**

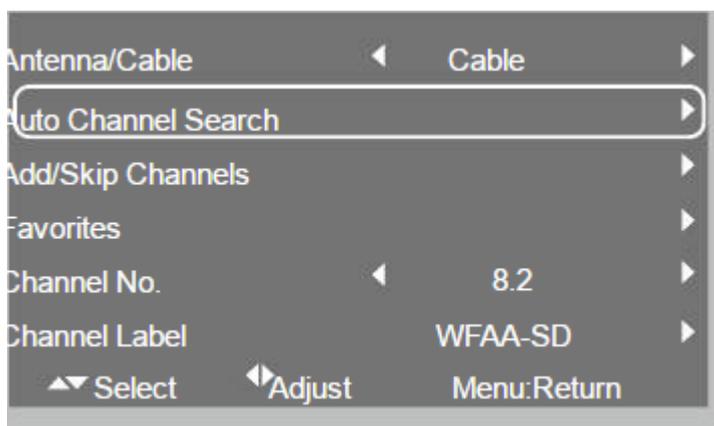

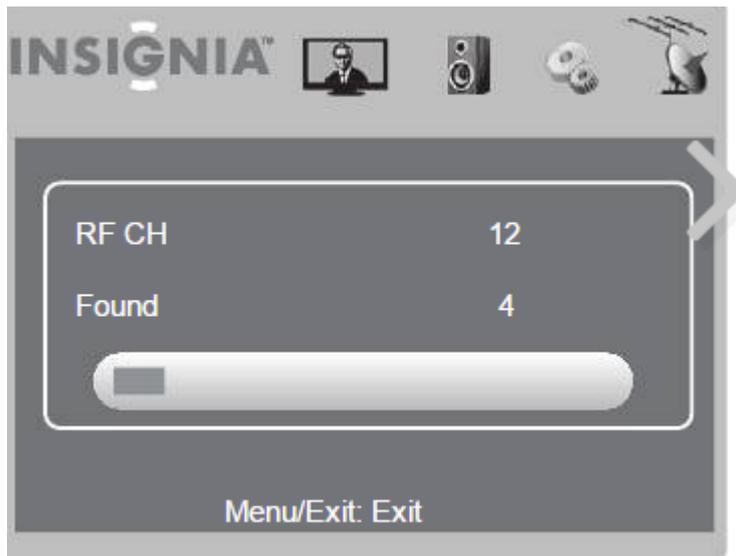

Your TV scans for analog and digital channels and stores the information in the channel list. When the scan is complete, your TV tunes to the first channel in the channel list

## **Mitsubishi tv**

### **Step 1**

Press “Menu” on the remote to open the main menu on your television.

### **Step 2**

Use the down and up arrow keys on the remote to navigate throughout menu selections. Highlight the “Setup” icon; this displays the Setup menu. Press the right arrow key on the remote to highlight the “Scan” icon.

### **Step 3**

Choose your television input method. Choose “Ant 1 Air” or “Ant 2 Air” for connections to an indoor or outdoor antenna. Press the right arrow on the remote key to highlight the “Start” button located on screen.

### **Step 4**

Press “Enter” on the remote to begin automatic channel memorization. You can press “Cancel” to stop channel memorization at any time.

### **Step 5**

Hit “Menu” twice when channel memorization is complete to return to the main menu, or press “Exit” to watch television.